



Auto Ace AF2217

User Manual



SELF-PROPELLED FLOOR SCRUBBER

Instructions for operation and maintenance

CATALOGUE

List	1
EXECEPTION CLAUSE	1
INTRODUCTORY COMMENT	2
TECHNICAL DESCRIPTION	3
SYMBOLS USED IN THE MANUAL	4
GENERAL SAFETY REGULATIONS	5
I 、 MACHINE PREPARATION	
HANDLING THE PACKED MACHINE	6
HOW TO UNPACK THE MACHINE	6
OVERALL INTRODUCTION	8
SAFETY PRECAUTIONS	9
INSERTING THE BATTERY	9
BATTERY STORAGE	9
BATTERY DISCHARGING	9
BATTERY CHARGING	10
BMS OPERATION	10
TROUBLESHOOTING	10
BATTERY RECYCLING	10
VOLTMETER	11
ASSEMBLING THE SQUEEGEE	12
ADJUSTING THE HEIGHT OF SQUEEGEE	12
RECOVERY TANK、 SOLUTION TANK、 CLEAN WATER	12
ASSEMBLING THE BRUSH	13
II、 WORK	
PREPARING TO WORK	14
WORKING	14
OVERFLOW DEVICE	15
AT THE END OF THE WORK	15
III、 DAILY MAINTENANCE	
CLEANING THE RECOVERY TANK	16
CLEANING THE SUCTION FILTER	16
CLEANING THE SQUEEGEE	16
DISASSEMBLING THE BRUSH	17
CLEANING THE BATTERY BOX	17
IV、 WEEKLY MAINTENANCE	18
V、 TROUBLE SHOOTING	20
VI、 CHOOSING AND USING THE BRUSHES	21

List**Standard Packing List**

order	name	unit	quantity
1	Machine	set	1
2	Lithium battery	set	1
3	Battery charger	set	1
4	floor scrubber brush	set	1
5	Rubber Strip	Kit (2pcs)	1
6	Squeegee assembly	set	1
7	Suction pipe	piece	1
8	Manual	piece	1

Replacement Cycle and Warranty Specification for Easily Wounded and Consumption Parts

name	Recommended replacement cycle	warranty statement
Lithium battery	5000 charge-discharge cycles	5 years
front squeegee blade rubber	300 hour	No warranty
rear squeegee blade rubber	500 hour	No warranty
brush	700 hour	No warranty
suction motor	1200 hour	24 months
Brush motor	4000 hour	24 months
Suction hose	1000 hour	No warranty
exhaust pipe	1000 hour	No warranty

**EXCEPTION CLAUSE**

1. Read and check the power supply size indicated on the nameplate before use , And confirm that the current power supply meets the requirements of this product. In case of product damage or personal injury caused by incorrect use of power supply , our company is not liable.
2. Do not use it beyond its rated load. If this causes damage to the parts , our company is not liable.
3. Do not use in ultra-extreme environments (acidic, alkaline, too low or too high ambient temperature) , If any damage, accident or injury is caused by it, etc , our company is not liable.
4. Our company is not liable for failure and damage caused by failure to use, maintain, keep or put foreign bodies in.

5. Our company is not liable for damage or injury caused by unauthorized refitting of washing trucks ,etc.

ATTENTION

To avoid harm to the operator and damage to the machine, please read the contents marked

this symbol  carefully.

ATTENTION: Danger of exhalation of gas  and leakage of corrosive liquids. 



ATTENTION: danger of fire: do not go near with free flames.

ON CONSIGNMENT OF THE MACHINE

When the machine is consigned to the customer, an immediate check must be performed to ensure all the material mentioned in the shipping documents has been received, and also to check the machine has not suffered damage during transportation. If this is the case, the carrier must ascertain the extent of the damage at once, informing our customer service office. It is only by prompt action of this type that the missing material can be obtained, and compensation for damage successfully claimed.

INTRODUCTORY COMMENT

Floor scrubber-dryer, via the mechanical action of the rotating brush and the chemical action of a water/detergent solution, can clean any type of flooring. As it advances, it also collects the dirt removed and the detergent solution not absorbed by the floor. Even the best machines will only work well if used correctly and kept in good working order. We therefore suggest you read this instruction booklet carefully and read it again whenever difficulties arise while using the machine. If necessary, remember that our assistance service (organized in collaboration with our dealers) is always available for advice or direct intervention.

INTENDED USE

The scrubbing machine is designed exclusively for the professional cleaning of surfaces and floors in industrial, commercial and public environments. The machine is only suitable for use in closed - or at least covered - locations.

The machine is not suitable for use in the rain, or under water jets. It is FORBIDDEN to use the machine for picking up dangerous dusts or inflammable liquids within places with a potentially explosive atmosphere. In addition, it is not suitable as a means of transport for people or objects.

TECHNICAL DESCRIPTION

Working Width	Inch	22
Squeegee Width	Inch	33
Max. Forward Speed	mi/h	2.80
Max. Capacities	sqft/h	27000
Brush Pressure	lb	88
Brush RPM	rpm	155
Brush Motor	V/W	24V/550W
Suction Motor	V/W	24V/500W
Drive Motor	V/W	24V/300W
Full Charging Time	H	4
Solution Tank	Gal	16
Recovery Tank	Gal	17
Dimensions LWH	Inch	52"D×24"W×41"H
Battery	V	25.6V/100AH
Battery Weight	lb	50
Net weight	lb	210

SYMBOLS USED IN THE MANUAL



Attention



Manual



Watch Your Hand



Warning injure hand



No open flames



Caution Danger of exhalation of gas



Recycle



Information



Warning corrosion



Caution shock



Dangerous waste



Lifting means

GENERAL SAFETY REGULATIONS

The regulations below must be carefully followed in order to avoid harm to the operator and damage to the machine.

- ◆ Read the labels on the machine carefully. Do not cover them for any reason and replace them immediately if they become damaged.
- ◆ The machine must be used exclusively by authorized, trained personnel.
- ◆ During the working of the machine, pay attention to other people and especially to children.
- ◆ Do not mix different types of detergent as this may produce harmful gases.
- ◆ Do not pack the machine when there is residual liquid in it.
- ◆ Conditions of use: room temperature between 0°C and 40°C with relative humidity between 30 and 95%.
- ◆ Do not use the machine in an explosive atmosphere.
- ◆ Do not use the machine as a means of transport.
- ◆ Do not use acid solutions, which may damage the machine or harm the operator.
- ◆ Avoid working with the brushes when the machine is standing still, so as not to damage the floor.
- ◆ Do not vacuum inflammable liquids
- ◆ Do not use the device to collect dangerous powders.
- ◆ In the event of a fire, use a powder extinguisher. Do not use water.
- ◆ Do not knock against shelving or scaffolding, where there is a danger of falling objects.
- ◆ Select the operating speed according to the traction status.
- ◆ Do not use the machine on surfaces with an inclination greater than the one shown on the plate.
- ◆ When not in use, remove the keys and place the machine in a proper way to keep still.
- ◆ The machine is designed to carry out the washing and drying operations simultaneously. Different operations should only be carried out in areas where the passage of unauthorized persons is prohibited. Signal the presence of damp floors with suitable signs.
- ◆ If the machine does not work properly, check this is not caused by failure to carry out routine maintenance. Otherwise, request the intervention of your dealer After-sale Service Centre.
- ◆ If you need to replace any components, request the ORIGINAL spare parts from a dealer or Authorized Retailer.
- ◆ Only use the brushes supplied with the device, or those specified in the Use and

Maintenance Manual.

- ◆ Pull down the emergency brake immediately when there is an operation risk.
- ◆ Before carrying out any maintenance work, switch off the machine and disconnect the battery connector.
- ◆ Make sure the whole electrical connection is recovered after maintenance.
- ◆ Do not remove any protection devices which require the use of special tools.
- ◆ Do not wash the machine with corrosive substances or with pressurized water.
- ◆ Send the machine to a Service Center nearby for servicing after 200 hours of use.
- ◆ To prevent the formation of scale in the solution tank filter, do not fill the tank with detergent solution many hours before using the machine.
- ◆ Before using the machine, check that all the hatches and covers are positioned as shown in this Manual.
- ◆ Before moving the recovery tank, empty the water.
- ◆ When disposing of consumption materials, observe the laws and regulations in force.
- ◆ When your machine has reached the end of its long working life, dispose of the materials it contains in an appropriate manner (e.g. oil, battery and electric parts), and bearing in mind that the machine itself was constructed using 100% recyclable materials.

I . MACHINE PREPARATION

HANDLING THE PACKED MACHINE


The machine is fixed to a pallet, which is specially designed for forklift handling.

Overall dimensions of the package :

L: 57"


W: 25"

H: 47"

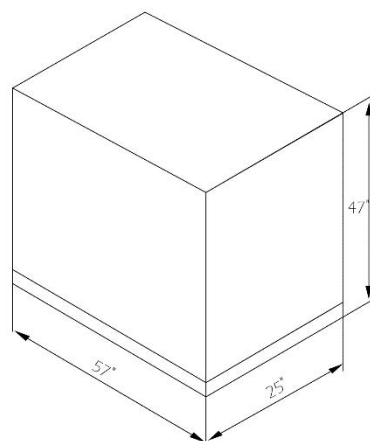

HOW TO UNPACK THE MACHINE


1. Remove the outer packaging (as figure)
2. The machine is fixed to the pallet with wedges and belts which block the wheel.
3. Remove these belts.

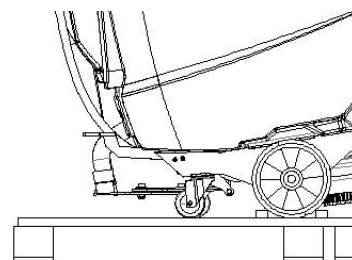


4. Get the machine down from the pallet.



Keep the pallet for any future transport needs.

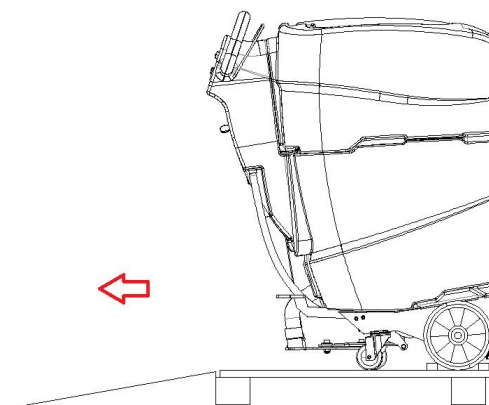

OVERALL INTRODUCTION

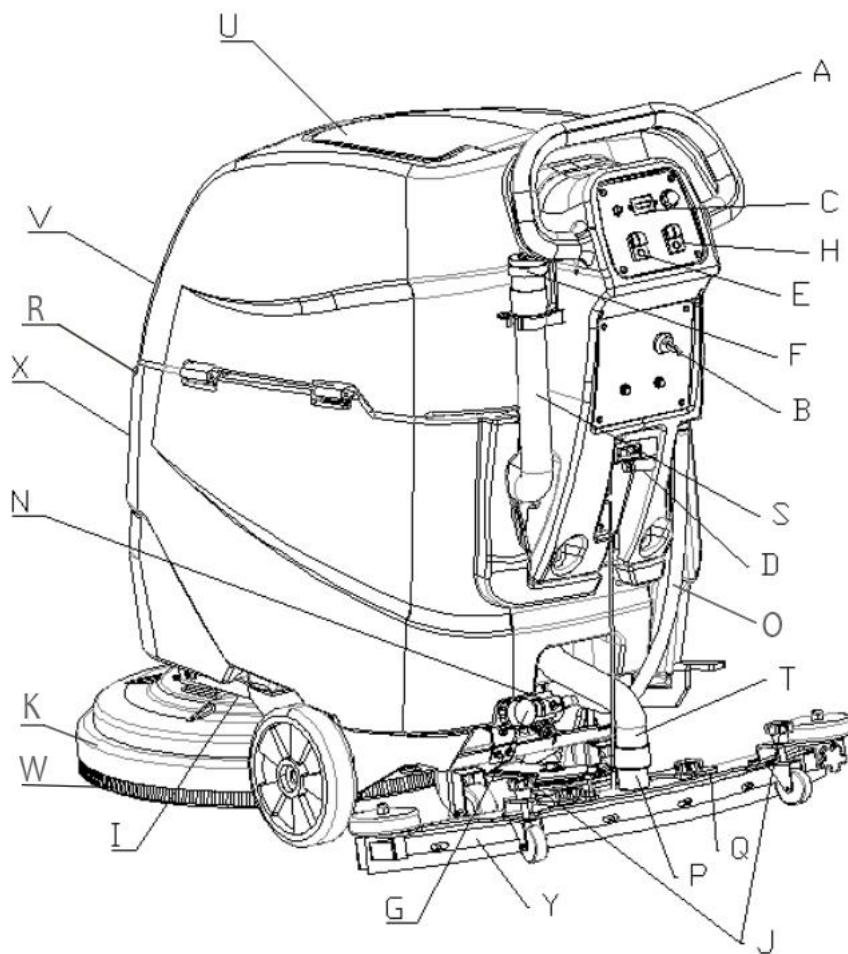

A : Handle	B : Key switch	C : Voltmeter	D : Squeegee lifting lever
E : Brush switch	F : Drain Cover	G : Filter	H : Squeegee switch
I : Magnetic valve	J : Angle adjuster	K : Brush disk	N : Water tap
O : Water level indicator		P : Squeegee fixed handle	
Q : Squeegee	R : Water filling cover	S : Sewage pipe	T : Suction pipe
U : Recovery tank cover	V : Recovery tank	W: Splash Guard	X : Solution tank
Y : Squeegee strip	Z : Lithium battery		

SAFETY PRECAUTIONS


Lithium Iron Phosphate (LiFePO₄) batteries are an inherently safe chemistry. However, as with any electronics, safety measures should always be taken.

1. Always wear protective gear when handling batteries.
2. Use proper tools, such as a wrench with a rubber-coated handle, to avoid short-circuits.
3. Keep batteries away from metallic surfaces and flammable materials.
4. Ensure all cable connections are secure and corrosion-free.
5. Store and transport batteries using the provided lifting handles.
6. Warm Tips for Battery Application: This 24V 100Ah lithium battery is not suitable for operating golf carts, engines, or any equipment that generates a high current during startup.

INSERTING THE BATTERY (apply to AF2217)

The battery should be correctly placed in the battery box below the recovery tank. Inserting the battery as follows (as figure) :

1. Make sure the sewage tank is empty, and then lift it up.
2. Put the battery on the pallet in place.
3. Connect all cables.
4. Do not connect batteries in series or parallel without proper guidance.
5. The front and the top of this 24V100Ah batteries can not be upside down.

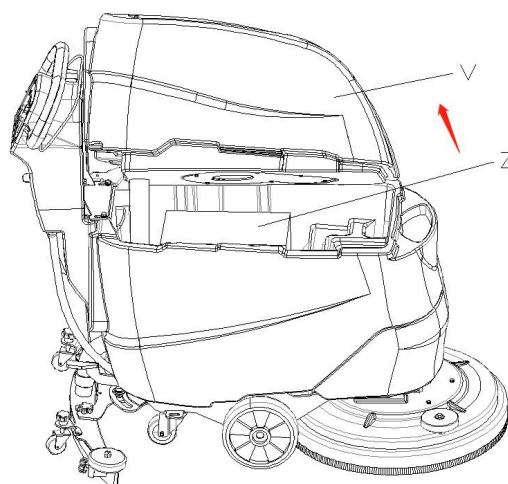

BATTERY STORAGE

1. Store batteries at temperatures between 32°F to 95°F (0°C to 35°C) for short-term and 32°F to 77°F (0°C to 25°C) for long-term storage.
2. Maintain a state of charge above 50% and cycle batteries every 6 months during extended storage.

BATTERY DISCHARGING

1. LiFePO₄ batteries are safe to operate between -4°F to 140°F (-20°C to 60°C).
2. LiFePO₄ batteries are designed to allow for complete discharge down to zero percent, but it is generally recommended to begin charging when the battery level drops to 20% to maintain the health of the battery and extend its lifespan.

BATTERY CHARGING



For charging safety, please ensure that the machine's power is turned off or the forward/reverse switch is set to the neutral position during the charging process.

1. Please use the charger provided with the AF2217 Scrubber-Dryer, which is specifically designed for the lithium-ion battery. This charger ensures that the charging parameters, including voltage and current, are correctly matched to the battery's specifications.
2. LiFePO4 batteries do not require charging after each use and can be safely stored at partial states of charge.
3. The recommended charging temperature range is 32°F to 131°F (0°C to 55°C). For temperatures below 32°F (0°C), use batteries equipped with a heating module.
4. In the event that the lithium battery is unable to charge due to an extended period without power, utilize the emergency charging port to perform a forced charge and reactivate the battery cells.

BMS OPERATION

1. The internal BMS protects against under-voltage, over-voltage, over-current, over-temperature, and short-circuit conditions.
2. If the BMS disconnects the battery due to any regulatory restrictions, please follow the instructions provided in "Troubleshooting" to restore normal operation.

TROUBLESHOOTING

1. In case of operational issues, check the charger model and functionality. Replace if necessary.
2. Overcurrent Protection: If the battery activates its protection due to a high current, promptly disconnect it from the charger or any electronic load it's connected to. The battery should automatically resume normal operation after a short period.
3. Short Circuit Protection: Should your battery experience a short circuit, immediately remove any objects causing the short. Following this, use a suitable charger to replenish the battery at the standard current rate, which will assist in the battery's recovery from the short circuit condition.
4. Persistent Issues: If the aforementioned steps fail to address the problem, please reach out to a qualified service technician without delay. Avoid opening the battery casing yourself to prevent further damage or safety hazards.

BATTERY RECYCLING

Dispose of batteries at an authorized lithium recycling facility. Cover terminals with a protective cap or non-conductive tape before disposal.



VOLTMETER

The battery gauge of your floor scrubber provides crucial information regarding the status of the battery and the remaining operational time. Below is a detailed description of each section of the battery gauge:

1. Remaining Battery Percentage: Displays the remaining battery charge as a percentage. For instance, when it shows "80%", it means that the battery has 80% of its charge left.

Warm Reminder: When powering on, the battery percentage may temporarily show as 0%.

This is a normal phenomenon as the system initializes communication with the battery. Please wait for a moment, and the actual battery percentage will be displayed accurately. Thank you for your patience.

2. Battery Status Indicator: The battery gauge of the floor scrubber provides real-time information about the battery's status, which includes the following six modes:

Standby: Indicates that the battery is not currently charging or discharging, and the floor scrubber is in a standby state.

Chg (Charging): Indicates that the battery is currently being charged.


Disch (Discharging): Indicates that the battery is discharging, meaning the floor scrubber is operating on battery power.

Eoc (Error: Over-current): Indicates an over-current fault with the battery, which may be due to excessive current flow.

Etemp (Error: Over-temperature): Indicates an over-temperature fault with the battery, which may be due to the battery temperature exceeding safe levels.

Evol (Error: Over-voltage): Indicates an over-voltage fault with the battery, which may occur if the battery voltage goes beyond the safe range.

3. Remaining Working Time: Displays the time that the floor scrubber can continue to work with the current remaining battery charge. The time is formatted in hours (h) and minutes (m).

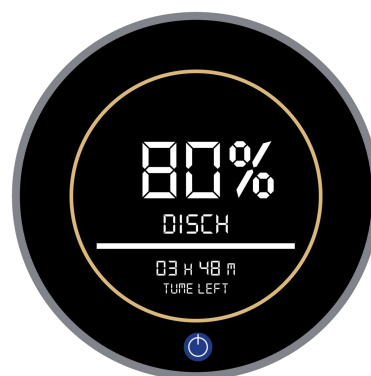

To ensure the performance of the floor scrubber and the lifespan of the battery, please regularly check the battery gauge and charge or replace the battery as needed. If a fault indicator appears, please stop using the machine immediately and contact a professional


technician for inspection and repair

ASSEMBLING THE SQUEEGEE

For packaging reasons, the squeegee is supplied disassembled from the machine, and must be assembled on the machine connection

Fix the squeegee to the Support frame assembly (Q) with bolt as figure.

Then connect the Suction pipe (T) to the squeegee

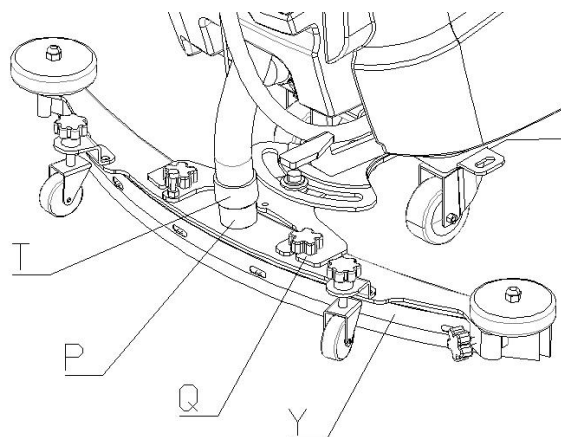


ADJUSTING THE HEIGHT OF SQUEEGEE

Adjust the height according to the rubber as follows:

Rotate the adjuster (J) clockwise to raise the squeegee, anticlockwise on the contrary.



Rotate the adjuster of both sides simultaneously to keep the squeegee parallel with the ground.

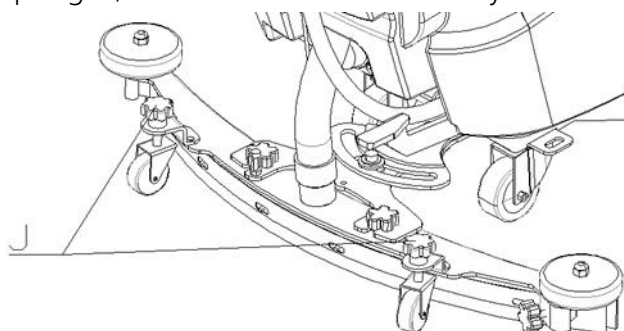


RECOVERY TANK

Rotate the recovery tank as far as it will go, using the side handle.


Check the suction tube (T), the drainage tube(S) and the recovery tank is correctly connected.

Check the suction tube (T) and the squeegee (P), the drainage tube(S) and the cap of drainage tube (F) is correctly connected further.

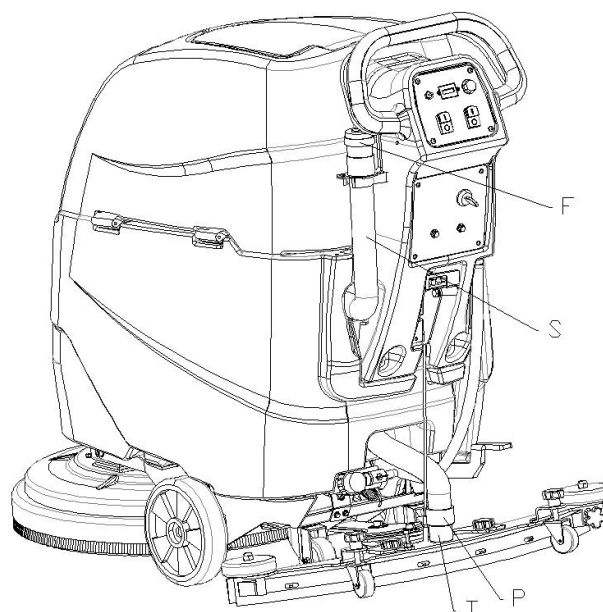

SOLUTION TANK

Remove the front inlet cap (R), fill it with clean water.

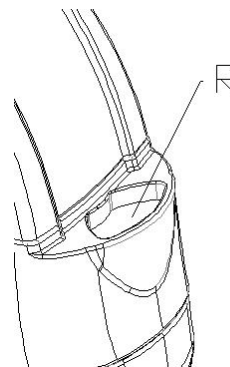

CLEAN WATER

Fill the solution tank with clean water at a temperature not exceeding 50°C. Add the liquid detergent to the tank in the concentration and manner indicated on the detergent manufacturer's label. The formation of excess foam could damage the suction motor, so use only the minimum amount of detergent necessary. Cover the tank with cap (R).




You are advised to always use low foam detergents and add a little anti-foam reagent to solution tank. Do not use pure acids !

ASSEMBLING THE BRUSH


1. At first, Press the switch vertically to turn off the machine.



This operation must be carried out after switch off the power supply to protect your hands.

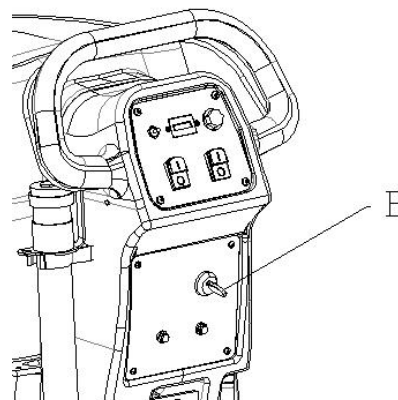


2. With the base up, place the brushes into the plate housing beneath the base, turning the brushes until the three pins enter the niches in the plate itself; turn until the pin is pushed towards the coupling spring and is locked into place. The figure shows the rotation direction for coupling the brush.

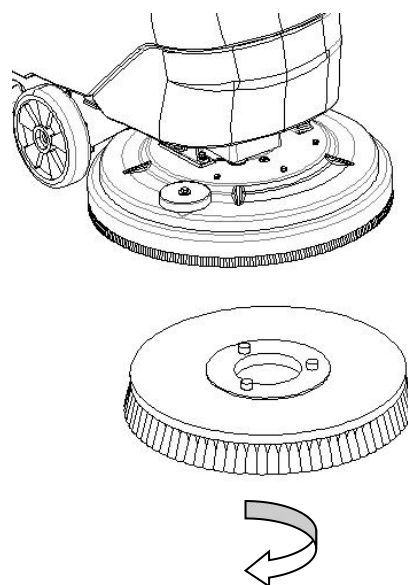

II.WORK

PREPARING TO WORK

1. Connect the battery;
2. Turn the key clockwise to activate the main switch. The monitor (H) on the instrument panel will immediately come on;
3. Rotate the water tap (N) to adjust the flow. Select an appropriate level. The water falls automatically while the brushes are turning. You are advised to adjust the level according to the movement speed and the type of floor and dust;
4. Lean the head of the machine toward the front and lower the base;
5. Lower the squeegee, rotating the squeegee lifting lever (D).

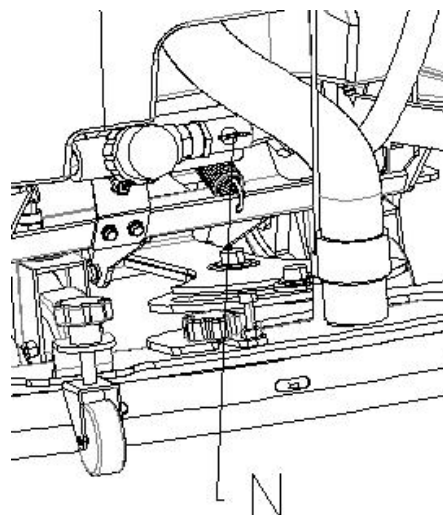

WORKING

Walk forward : Press the brush switch and Squeegee switch.


Then hold the handle with the machine working.



When making even brief reverse movements, check the squeegee is raised.

Check that there is sufficient solution and that the squeegee dries well during the initial operation. The machine will operate efficiently until the battery is depleted or the detergent solution is used up.

When there is an operation risk. Please turn down the power including the Key switch. Restart the machine after trouble shooting.

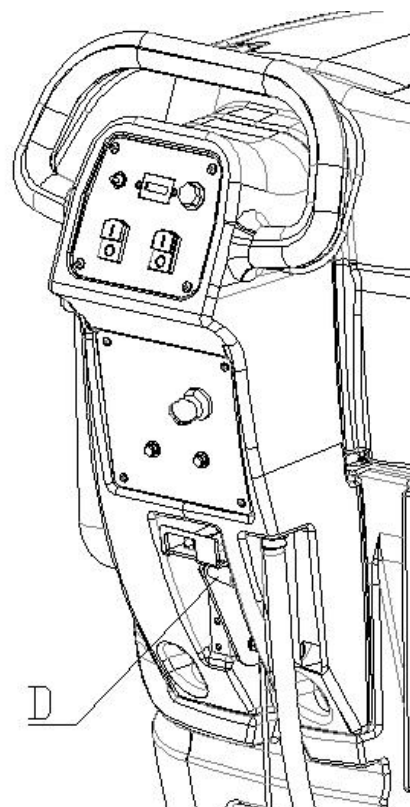

OVERFLOW DEVICE

The machine is fitted with a float which intervenes when the recovery tank is full, causing the suction tube to close. In this case, to avoid harming the motor, it is **MUST** to empty the recovery tank,




This operation must be carried out using gloves to protect against contact with dangerous solutions.

AT THE END OF THE WORK

1. Press the brush pedal to rise the brush.
2. Raise the squeegee by means of lifting lever (D).
3. Bring the machine to the place provided for draining the water.
4. Press the switch vertically to turn off the machine.
5. Remove the drainage tube (S) from its compartment.
6. Unscrew the drainage cap (F) and empty the recovery tank.



These operations must be carried out using gloves to protect against contact with dangerous solutions

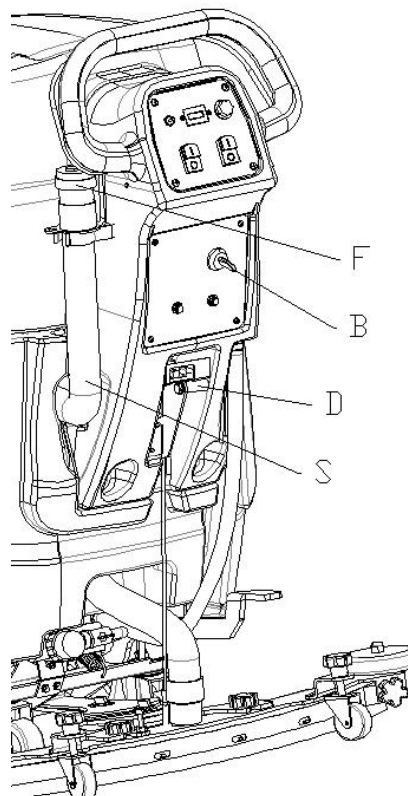

7. Disassemble the brushes and clean them with a jet of water (to disassemble the brushes, see "DISASSEMBLING THE BRUSHES" below).

III . DAILY MAINTENANCE


CLEANING THE RECOVERY TANK

1. Remove the Sewage pipe(S)
2. Remove the cap (F) and empty the tank.




These operations must be carried out using gloves to protect against contact with dangerous solutions

3. Rinse the inside of the tank well with a jet of water, then empty the tank ;
4. Rinse all the elements with a jet of water to make clean
5. Reassemble all the elements.

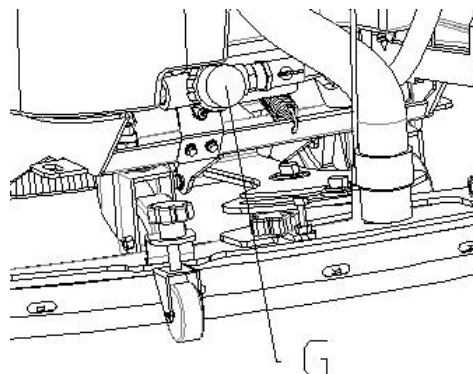

CLEANING THE SUCTION FILTER


1. Remove the suction filter (G) from its seat.
Use a jet of water to clean the walls and base of the filter.
2. Reassemble all the elements.

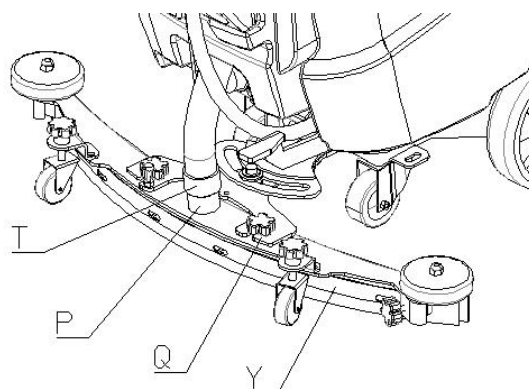

CLEANING THE SQUEEGEE

Check the squeegee is always clean, for better drying results, to clean it you must:

1. Remove the tube (T) from the squeegee.
2. Release the Squeegee fixed nut, then take down the squeegee (Y)
3. Carefully clean the inside of the squeegee (Q) and rubbers.
4. Every week, or whenever suction seems to be unsatisfactory, check the squeegee tube is not obstructed. To clean it
5. Reassemble all the elements again.

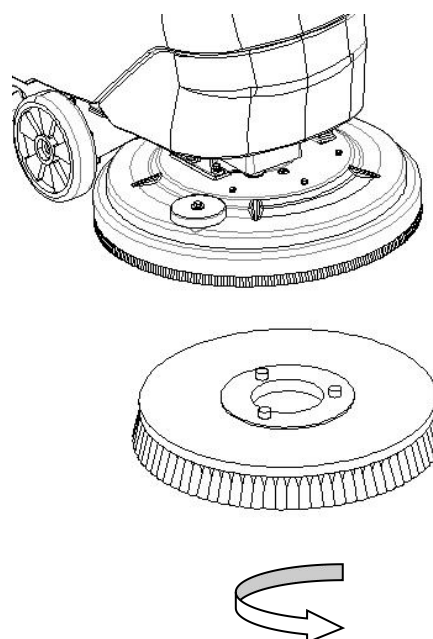

DISASSEMBLING THE BRUSH

1. Get the base up;
2. Turning the brush to the direction that The figure shows the rotation;
3. If you will not use the machine long time. Please disassembling the brush, then keep it clean and dry.

CLEANING THE BATTERY BOX

Whenever keep the battery and box clean with duster. Check out jumper cables and insulation base to make sure connecting firmly. If not it will lead to the jumper cables heat. Then the battery will be under the influence of that.



This operation must be carried out using gloves to protect against contact with dangerous solutions.




Danger of exhalation of gas and leakage of corrosive liquids




Danger of fire: do not go near with free flames.

IV. WEEKLY MAINTENANCE

1. Add grease or lubricating oil to the sliding part regularly

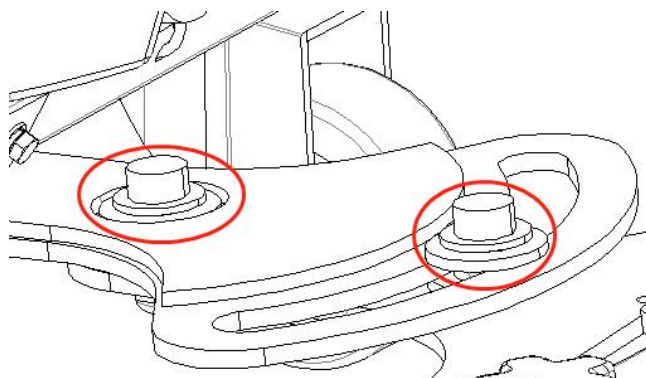

support frame assembly

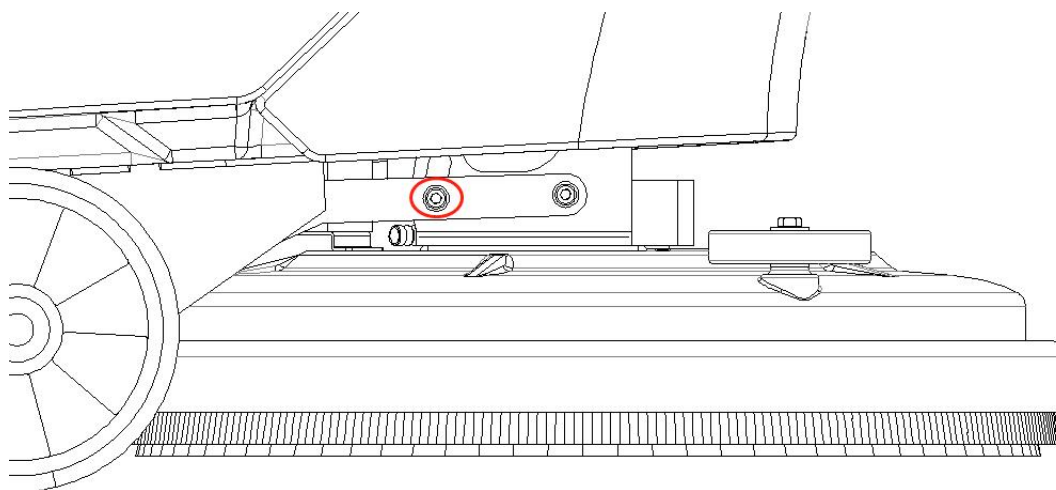


nose assembly

2. REPLACING THE SQUEEGEE RUBBERS

Check the state of wear and tear of the squeegee rubbers and, if necessary, replace them as below:

- 1 . Remove the tube (T) from the sleeve (P) on the squeegee.
- 2 . Rotate the nut on the squeegee.
- 3 . Unthread the squeegee (Y).
- 4 . Loosen the screw (4) that block the rubber-pressing blade and take down the plate (5) stainless steel.
- 5 . Reassemble the rubber (6).

Then reassemble all the elements

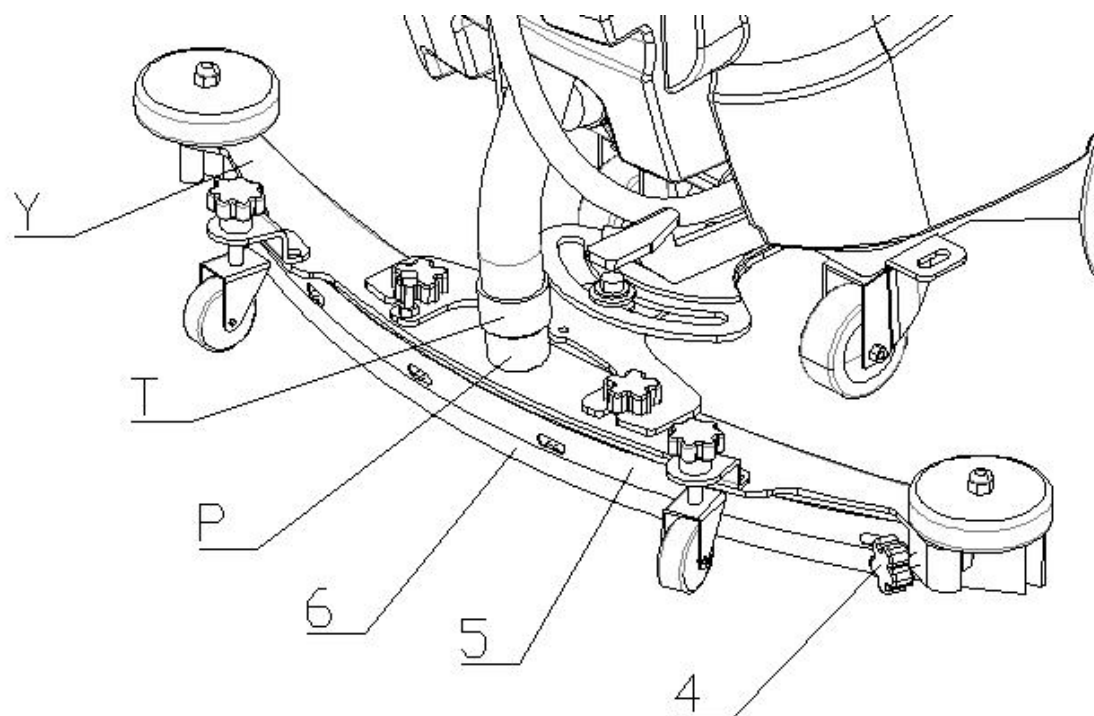

V. TROUBLE SHOOTING

Before you take it to repair or call our customer service to help, you should check out those problems.

Phenomena	Reason	Method
Brush motor can't work	1. Check out whether electricity is good; 2. Check out whether motor switch is on; 3. Check out whether the voltage is good.	1. Plug in the power and make sure the fuses are normal work; 2. Turn on the switch of motor; 3. The battery are fully charged.
Water can't come out from the brush or slightly	1. Filter or joint is clogged; 2. Clean the drier ground at first, so the water can't catch up with it; 3. The solenoid valve is clogged or rejected.	1. Take down the filter and joint, then wash them; 2. If the ground is drier, you must spray it extra; 3. Take down the solenoid valve, then wash it.
Suction abate	1. The cover of recovery tank is not sealed; 2. Hose clamp loose; 3. Suction Motor loose or defection; 4. The suction hose is not completely blocked; 5. Battery low.	1. Check the seal rubber of cover and make sure the cover will be sealed; 2. Check out and lock the hose clamp; 3. Make sure the motor install well and tighten the screw; 4. Dredge the pipe; 5. Charge the battery.
Water absorption is not clean	1. Suction motor do not work; 2. Suction hose is blocked; 3. The squeegee is blocked with something; 4. The squeegee is totally worn-out; 5. The height of the squeegee is not suitable.	1. Check out the motor (according to above) ; 2. Clean them; 3. Clean them; 4. Change squeegee blade rubbers; 5. Adjust the height of the squeegee.
The brush do not clean well	1. The motor of the brush can not work; 2. Dirt is too stubborn; 3. Brush is serious abrasion; 4. Something twine round the brush.	1. Check out the motor; 2. Use appropriate cleaning fluid; 3. Change the brush; 4. Clean them.

VI. CHOOSING AND USING THE BRUSHES

POLYPROPYLENE BRUSH (PPL)

Used on all types of floors. Good resistance to wear and tear, and hot water (no greater than 60°C). The Polypropylene brush is non-hygroscopic and therefore retains its characteristics even when working in wet conditions.

NYLON BRUSH

Used on all types of floors. Good resistance to wear and tear, and hot water (no greater than 60°C). The Nylon brush is hygroscopic and easy-extended; as a result it cannot retain its characteristics when working in wet conditions.

ABRASIVE BRUSH

The bristles of this type of brush are extremely hard. It is used to clean very dirty floors. To avoid floor damage, work only with the pressure strictly necessary.

STEEL BRUSH

It is made up of steel wire and artificial fiber blends and used to clean rough roads, floors with big joints or dirt which is difficult to clean up.

THICKNESS OF THE BRISTLES

Thicker bristles are more rigid and are therefore used on smooth floors or floors with small joints.

On uneven floors or those with deep joints, it is advisable to use softer bristles which can enter the gaps more easily.



Remember that when the bristles are worn and therefore too short, they will become rigid and are no longer able to penetrate and clean deep down. In this case, like with over-large bristles, the brush tends to jump.

Where Aiolith Blows, Cleanliness Follows

THANK YOU FOR CHOOSING US

Aiolith Inc.